LP-1520ai 123 Manual for Radio Firmware updating.

SLANPRO

LP1520ai_M123_ENF01W



LP-1520ai 123 Manual for Radio Firmware updating.

The firmware upgrade is a delicate process that can irreversibly damage the LP-1520ai equipment if incorrectly done. LanPro is not liable for any damages to the LP-1520ai when this upgrade is incorrectly done by the user.

Dear user, please follow the following steps in order to update the firmware of your LP-2520ai Radio:

- 1 It should be connected to the physical network not through the wireless one.
- 2 During this process, please don't reboot the equipment in manual mode as you can cause permanent damage to the unit.
- The uploading of the Firmware's files must be done in the specified order.
- Remember to make a security copy of your equipment's configuration in digital and in printed form.
- 5 Once done, the Firmware will restore the factory values.

Please open your preferred Browser and input the IP address of your LP-1520ai. The default address is: 192.168.1.254, as shown in figure 1.



Select option: **Upgrade Firmware** as shown in figure 2.

51

SLANPRO	LP-1520ai High Power AP.	WWW.LANPRO.COM
Site contents: Setup Weard Operation Mode Wreless TCP/IP Settings Frewall Status Status Donal-of-Senace Upgrade Firmware StatusChoog Log Upgrade Firmware StatusChoog Password	Upgrade Firmware This page allows you upgrade the Access Point fewware to new version. Please note, do not power off the device during the upload because it may crash the system. Select File: Upload Reset	
2	Figure 2	

Select option: Browse and locate the file named: Ip-gw-upg.bin, then select: Open as shown in figure 3.

SLANPRO			LP-1520	ai High Power	AP.	WWW.LANPRO.COM			
Site contents Setup Wuzard Operation Mode Wreless TCP/IP Settings Freewall Statistics DDMS Time Zone Setting Denial of Service WatchDog Log Log Dograde Firmwark Size/Reload Setting Password	Upgrad This page allor power off the c Select File: Upload	e Firmwa Choose File to Look n Mg Recent Documents Documents Documents My Cocuments My Cocuments My Cocuments My Cocuments	EPPT 24	d.		* (* [*]			
		Placet	Files of type:	All Files [".")			Cancel		

4

5

Select: **Upload** and wait until the equipment loads the file and reboots, remember not to turn the equipment off while this happens, as shown in figure 4.



You will notice how it is loading, as shown in the window shown in figure 5.

SLANPRO	LP-1520ai High Power AP.	WWW.LANPRO.COM
Site contents Setup Wizard Operation Mode Weless TCP/IP Settings Firewall Status Status DOVS Time Zone Setting Denial-of Senice WatchDog Log Upgrade Firmware Save/Reload Setting Paraword	Upgrade Firmware This page allows you upgrade the Access Point finnware to new version. Please note, do not power off the device during the upload because it may crash the system. Select File: C:Documents and Sets; Browse Upload Reset Please wait.	
	Figure 5	

6

Once loading is finished, the equipment will reboot automatically as shown in figure 6. Please wait for about 3 minutes, then select: **OK**.



Figure 6

7	

Select again option: Upgrade Firmware, as shown in figure 7.

SLANPRO	LP-1520ai High Power AP.	WWW.LANPRO.COM
Site contents: Setup Wizard Operation Mode Wireless TCP/IP Settings Freesal Status Status Status Status Donks Time Zone Setting Denial-of-Service WatchDog Log Upgrade Firmware Save/Reload Setting Password	Upgrade Firmware This page allows you upgrade the Access Point firmware to new version. Please note, do not power off the device during the upload because it may ceash the system. Select File: Browse. Upload Reset	
	Figure 7	

8

Select option: Browse, as shown in figure 8, locate file: config-gw-ogf.bin, then select: Open, as shown in figure 8.

Site contents:	Upgrade	e Firmwa	re		
Coperation Mode Wireless TCP/IP Settings Status Status DONS Time Zone Setting Denial-of Senice WatchDog Log Upgrade Firmware SawReload Setting Password	This page allor power off the i Select File: Upload	Choose File to Look in Hy Recent Documents Desilop Hy Documents	Upload	- C d	₩
			Figure 8		

Select: **Upload** as shown in figure 9 and wait until the equipment loads the file and reboot again, remember not to turn the equipment off while this action takes effect.





10

One uploading is finished, (Please see figure 10), the equipment will reboot. Wait for three (3) minutes. Then select: **OK**, (Figure 10).



Figure 10

Note: In the event that the configuration is lost, please reload it from your backup.