

**123 Manual, LP-5420G wireless router.
Restore to factory default values**

LP5420G_M123_ENG01W

**123 Manual, LP-5420G
wireless router.
Restore to factory default values**

1

Disconnect the power supply of the router.

2

Locate a hole on the right side of the antenna at the rear of the router, as shown in **Figure 1**.

Figure 1

**3**

With a fine object press the button located in the hole gently. Reconnect the electric power, as shown in **Figure 2**. Wait about 10 seconds and stop pressing the button.

Figure 2

**A**

How to order

LP-5420G