

LP-N24, 123 Manual for DDNS Configuration.

LPN24_M123_ENE01W



**LP-N24,
123 Manual for DDNS Configuration.**



This document's goal is to explain how to configure DDNS in the LP-N24 Router.

1

Please open your preferred browser and navigate to the router's default address: **192.168.0.1**, as shown in figure 1.



Figure 1

2

The browser will open a new window asking for a User Name and a Password. Input: **admin** as the user and: **admin** as the Password (defaults), then select: **OK**, as shown in figure 2.



Figure 2

3

Select option: **System Tools, Remote DDNS**, mark option: **Enable**, as shown in figure 3.



Figure 3

4

Input in: **User Name** the name of the user of the DynDNS account, in: **Password** input the password of the account. In: **Domain Name** the hostname created in DynDNS then, select: **Apply** as shown in figure 4. If you have not created your DynDNS account, we invite you to download document: **LPN24_M123_SPF01** from Lanpro.com and to follow its instructions.



Figure 4