MERCURY Series Firmware Update 123 Manual.

MERCURY_FWU_ENB01W

i Important !

It is important to highlight that you must follow the next steps precisely for firmware updating of your MERCURY Series equipment.

You must be connected to the physical network, not through the wireless link.
Please don't restart your equipment manually during this process due to the possibility of inflicting damage to the equipment.
The order in which files are loaded shall be as specified here.
Remember to make a security copy of your equipment's configuration, in digital and written form.
Once you update your firmware, it will restore the default values of your equipment.

Step 1

Please open your browser of choice and input your MERCURY Series equipment's IP default address: **192.168.1.1**, the following address will pop up, please select: **Continue to this website.**



Figure 1

Step 2

Please input your by default user: **admin** and password: **your password**, select: **Login Now.**

	SGHZ 802.11a 54 Mbps High Speed Access Point
Name	admin
Password	•••••
ĺ	Login now Reset

Figure 2

Step 3

Select Option: **Upgrade Firmware.** Select Option **Browse** and locate the corresponding file.

IP Settings	^	
RADIUS Settings		Upgrade Firmware
HTTP Redirect		
Firewall Settings		Browse to locate the firmware file
Virtual Server		Browse
Load Balance		
Wireless Setup		Upload
A Basic Settings		
& VAP/VLAN Settings		
Access Control		
& WDS Settings		
» Advanced Settings		
Tools		
» Site Survey		
a Link Test		
Management		
Change Password		
Remote Management		
Upgrade Firmware		

Figure 3

Step 4

Select: Open.

Upgrade Firmware								
Choose File to Upload								
Look in	Finnware		. 000	· 🖽 •				
My Recent Documents	⊒FW1.1.11 ⊒FW1.1.24.m	et.						
My Documents								
My Computer								
My Network Places	File name: Files of type:	Pw1.1.24 All Files (".")	2	Open Cancel				

Figure 4

Step 5

Select: Upload.

IP Settings					
RADIUS Settings		Upgrade Firmware			
HTTP Redirect					
Firewall Settings		Browse to locate the firmware file			
Virtual Server		C:\Firmware\FW1.1.11 Browse			
Load Balance					
Wireless Setup		Upload			
Basic Settings					
» VAP/VLAN Settings					
Access Control					
A WDS Settings					
» Advanced Settings					
Tools					
a Site Survey					
▶ Link Test					
Management					
Change Password					

Figure 5

Step 6

Please wait until the equipment loads the file and restarts, please remember that you shall not turn the equipment off during the process.



Figure 6