SLANPRO

LPT-Xfast 4-Pair Termination Tool for X-Class Jacks made by LanPro, 123 Manual


LPTXfast_M123_ENB01W



LPT-Xfast 4-Pair Termination Tool for X-Class Jacks made by LanPro, 123 Manual


The **LPT-Xfast** 4-Pair Termination Tool has been designed for the termination of all the LanPro **X** Class Series Keystone compatible Jacks.

This M123 document will guide you on its use for the preparation of quality terminations.




Components of the LPT-Xfast tool

It is composed of two parts, the head including the die and the body.

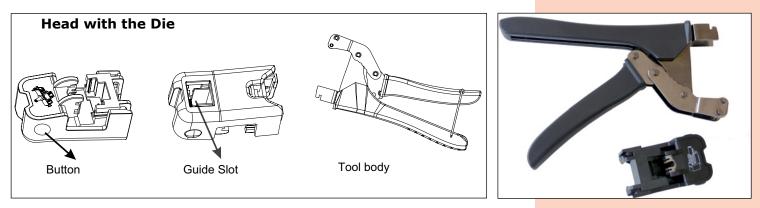


How to assemble the LPT-Xfast tool before use

1.- Insert the guide slot of the head with the Die into the tool body.

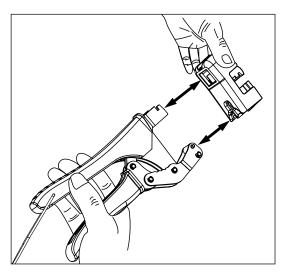




2.- Press the button at both sides while pushing the body on to the head with the Die until securely fixed.

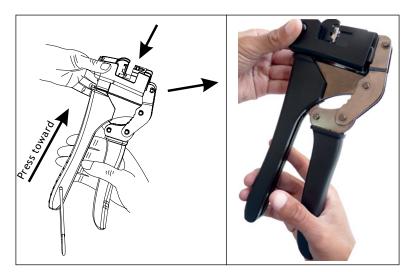





3.- Move forward the die and make sure it is completely fixed.

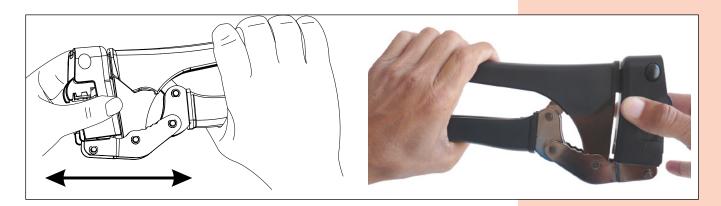


Precautions

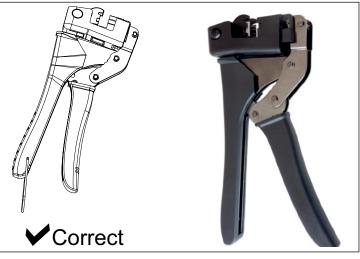

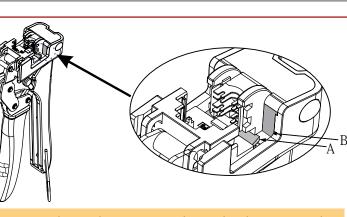


Please do not press the tool, when A, B sides are touching and there's no keystone *****Class Jack inside the die.

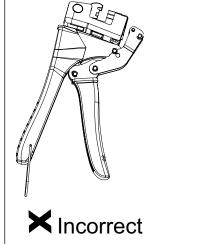



Termination

Install the wires and place them securely into the insulation displacement terminals, following the appropriate color code (T568A or T568B).

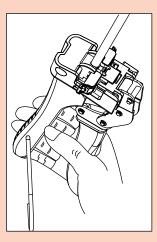

LanPro is continuously improving its products and reserves the right to change specifications and availability without prior notice.