

## 123 Manual, LP-FLLCXX2 FusionLess® 2 LC Connector 0.9mm type

LPFLLCXX\_M123\_ENB01W




## 123 Manual, LP-FLLCXX2 FusionLess® 2 LC Connector 0.9mm type

### 1 Features






- Quick and easy Fiber Termination
- Available to re-use
- High success rate of connection
- Superior Optical characteristic value
- Simple assembly process
- No failure after opening


### 2 Assembling Tools

1. Cleaver
2. Scissors
3. Gauze with alcohol
4. Stripper

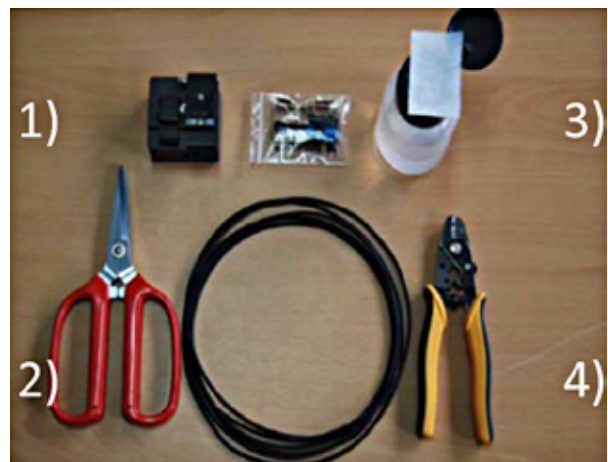


**A Re-assembling procedure**

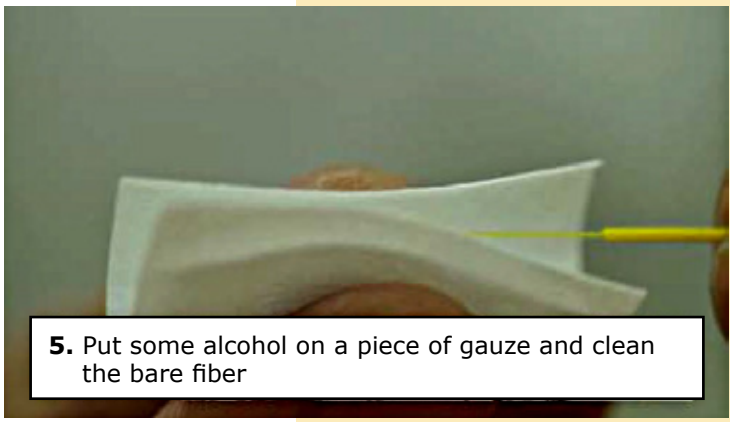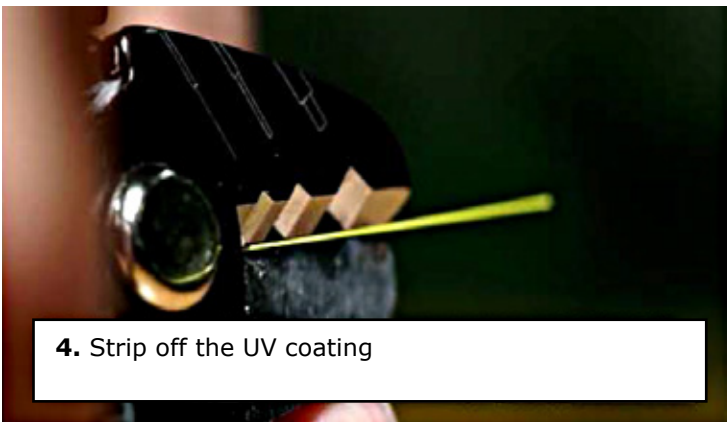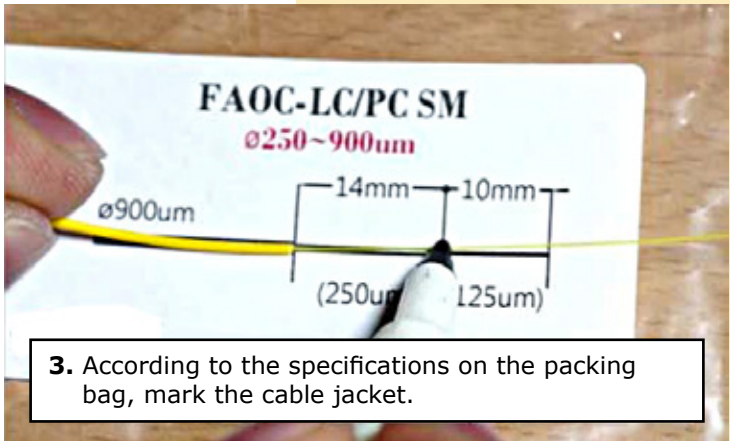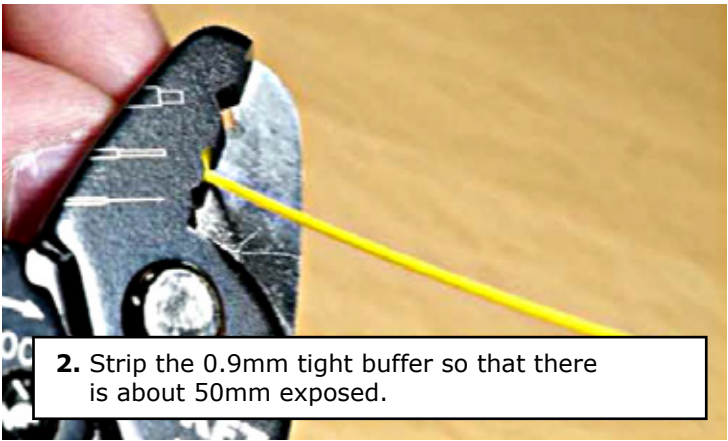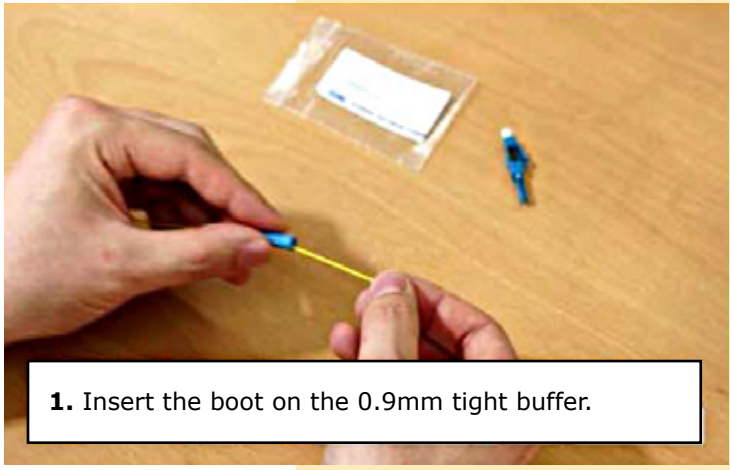


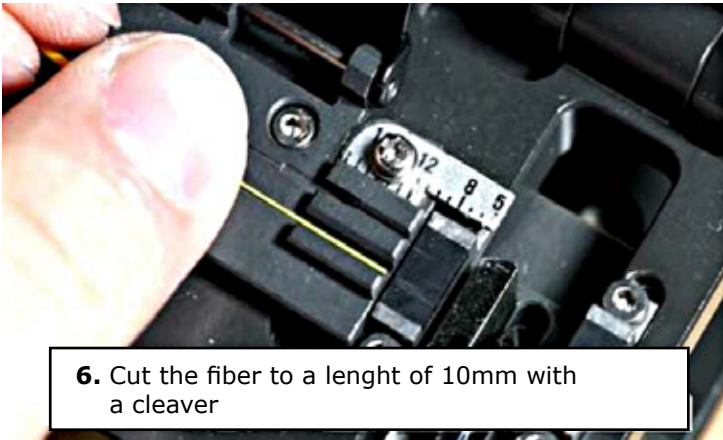


**6.** Cut the fiber to a length of 10mm with a cleaver

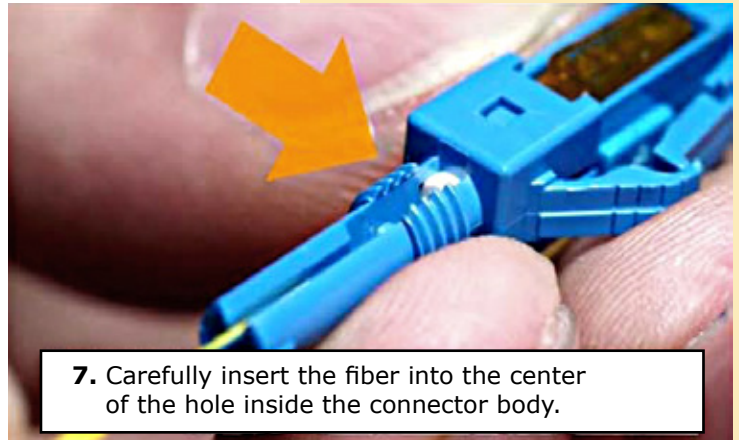


**7.** Carefully insert the fiber into the center of the hole inside the connector body.

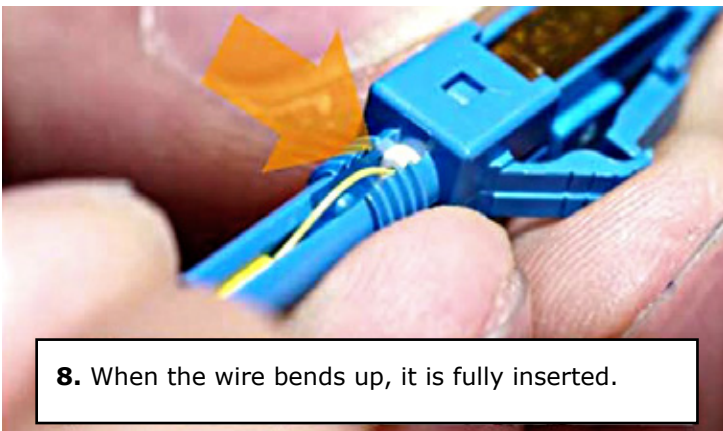


**8.** When the wire bends up, it is fully inserted.

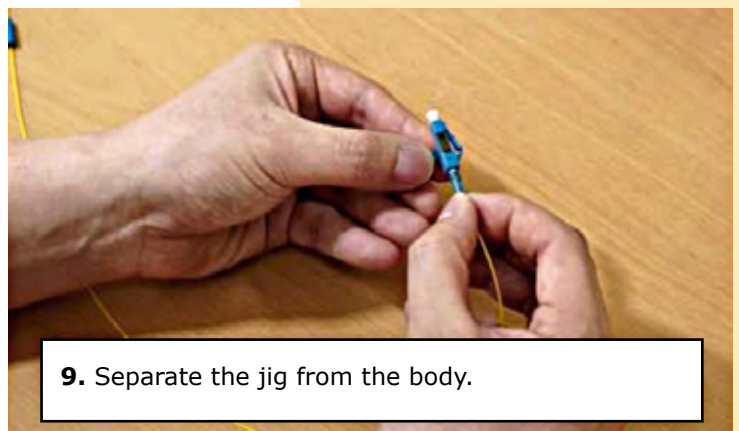


**9.** Separate the jig from the body.

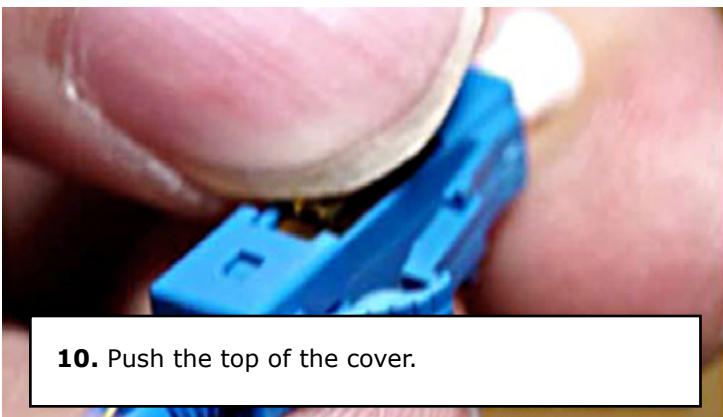

**10.** Push the top of the cover.

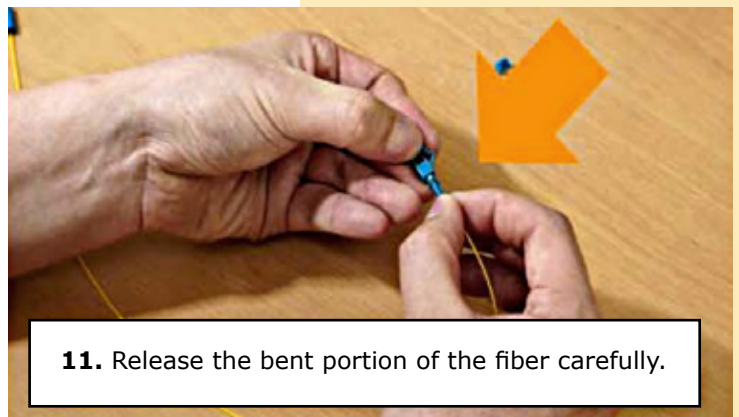

**11.** Release the bent portion of the fiber carefully.

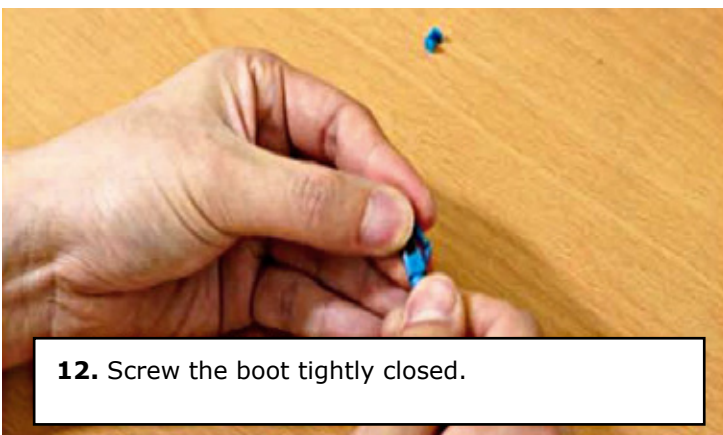

**12.** Screw the boot tightly closed.



**13.** It is complete.

**A** Re-assembling procedure

